



# How to install compressor switch:

Tools needed:

- Snap ring pliers (gpd 5811254)
- Switch puller/installation tool (gpd 5811423)

1. Loosen the manifold plate to release the pressure.

(\*\*\*Always wear safety glasses!\*\*\*)



2. Insert switch into the switch installation tool.



3. Place switch into switch port and press firmly.



4. Insert snap ring and press around the edges. Ensure that the snap ring seats correctly into the switch port.

(Use caution when installing snap ring)




5. Always check the label on the side of the compressor for the correct amount of oil needed in the compressor. Check the oil using the drain plug on the side of the compressor.



# How to remove compressor switch:


Tools needed:

- Snap ring pliers (gpd # 5811254)
- Switch puller/installation tool (gpd # 5811423)

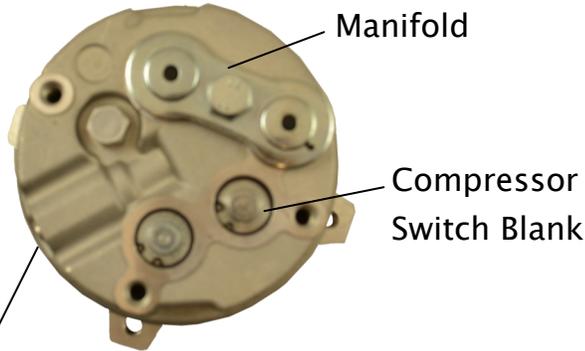

Control Valve (do not remove)

1. Loosen the manifold plate to release the pressure. *(Always wear safety glasses!)*

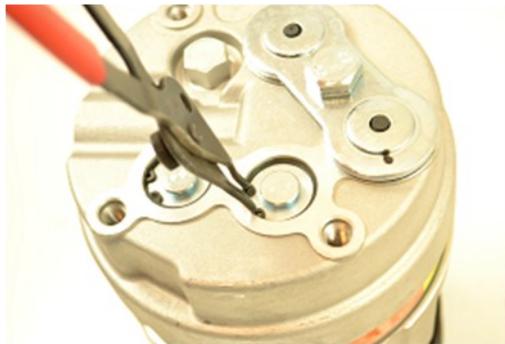


2. Squeeze snap ring that is holding the plug in place.



3. Gentle squeeze snap ring & pull up & out to remove.  
*(Caution! Snap ring may fly off due to tension.)*



4. Pry up on the plug to remove.

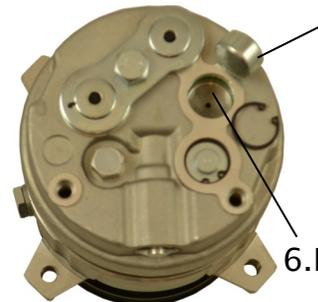

5. Remove & discard Compressor Switch Blank

6. Place switch here.